

SuperEar[®] Remote

Discreet Listening Device


Portable Size...unobtrusive!

Fixed Frequency...simply turn it on!

Unique Frequency...not shared by other receivers!

Long Distance...receives up to 100 yards away!

Recordable...connect to a recorder while listening!

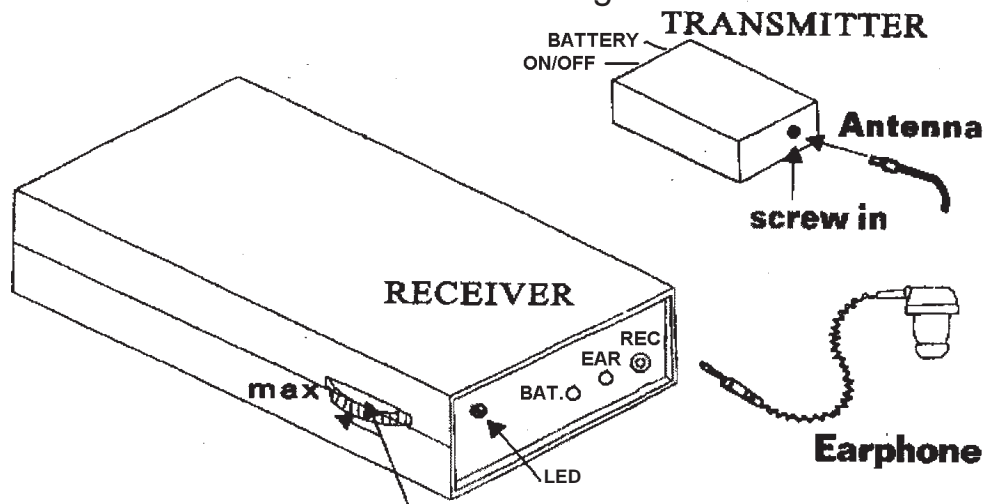

Switch volume control

1. Connect antenna to Transmitter by screwing the antenna's plug into the connector on the bottom of the unit. Try to keep the antenna extended as straight as possible.
2. Turn the Transmitter on using the small switch located next to the battery re-charger jack.
3. Connect the earphones by plugging them into the Receiver's jack (marked EAR)
4. Turn the Receiver on by moving the red switch on the side until hearing a click. Adjust the volume using the same on/off/volume control wheel.
5. To record, insert your recorder's input plug into the Receiver's jack (marked REC) using a standard 3.5mm bayonet auxiliary cord. The earphones must also be plugged in for the recording function to operate.

BATTERIES: Batteries in both the Transmitter and Receiver are 800mAh Lithium-ion rechargeable batteries, capable of non-stop operation for 30 to 90 hours. Batteries can be discharged and re-charged 200 to 300 times. Charging time is approximately 3 to 4 hours from empty to fully charged. To re-charge, simply plug the 3.5mm bayonet plug into the unit (marked with the +/- symbols on the Receiver; unmarked on the Transmitter), insert the USB plug on the other end of the recharger into the supplied wall plug and insert the wall plug into a 110V AC outlet. Batteries are not replaceable.

6 Month Manufacturer's Warranty on Defects. 30 Day Money-Back Guarantee.
Please do not use this unit for covert eavesdropping purposes. Check your state and local laws.

Distributed by Sonic Technology Products, Inc., 120 Richardson St., Grass Valley, CA 95945, USA
Telephone 1-800-247-5548 ■ www.sonictechnology.com ■ e-mail info@sonictechnology.com